


StartPave Grass and Soil Filling

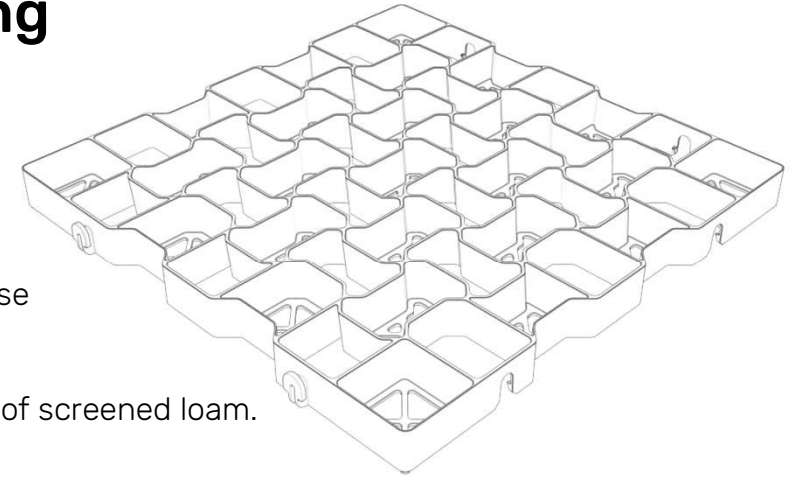

Installation Notes

- Subbase can be increased to accommodate greater storm water retention.
- Certain applications may require StartPave mesh and or geofabric between sub-base and sub-grade depending on site and soil requirements.
- Subbase requirements will vary based on project area use.
- Geofabric or landscape fabric is required between the subbase surface and 1" layer of screened loam.
- Level and lightly compact screened Loam before laying out StartPave.
- Lay out StartPave panels and fill with screened loam to the top of the grid.
- Run vibratory compactor over surface of grid until loam has receded $\frac{1}{4}$ " from surface.
- Sow grass or hydroseed and water.

