



## FODS INSTALLATION ANCHORING ACCESSORIES


## Anchoring Data Sheet

### GENERAL INFORMATION

To ensure proper performance and safety, FODS Track out system must be anchored in place. Proper anchoring procedure will vary depending on use and substrate condition. Form stakes can be used in most substrates. To anchor mats to asphalt or concrete, a concrete sleeved anchor should be used. Anchoring systems are sold separately.

For more information on how to use the anchors please see our installation guide or contact us at 1-800-671-9662

- Concrete Sleeve Anchor

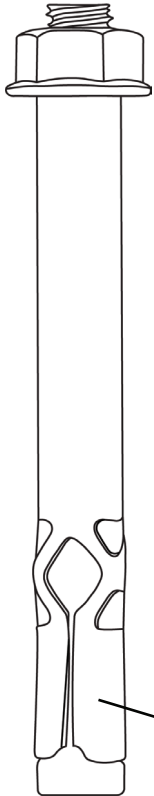

3/4" X  
6-1/4"  
HLC HEX  
NUT SLEEVE  
ANCHOR



AS NUT IS TIGHTENED,  
SLEEVE EXPANDS IN  
SUBSTRATE

- Form Stake

18 IN. X 3/4 IN.  
NAIL STAKES  
WITH HOLES

